


BRACKETS

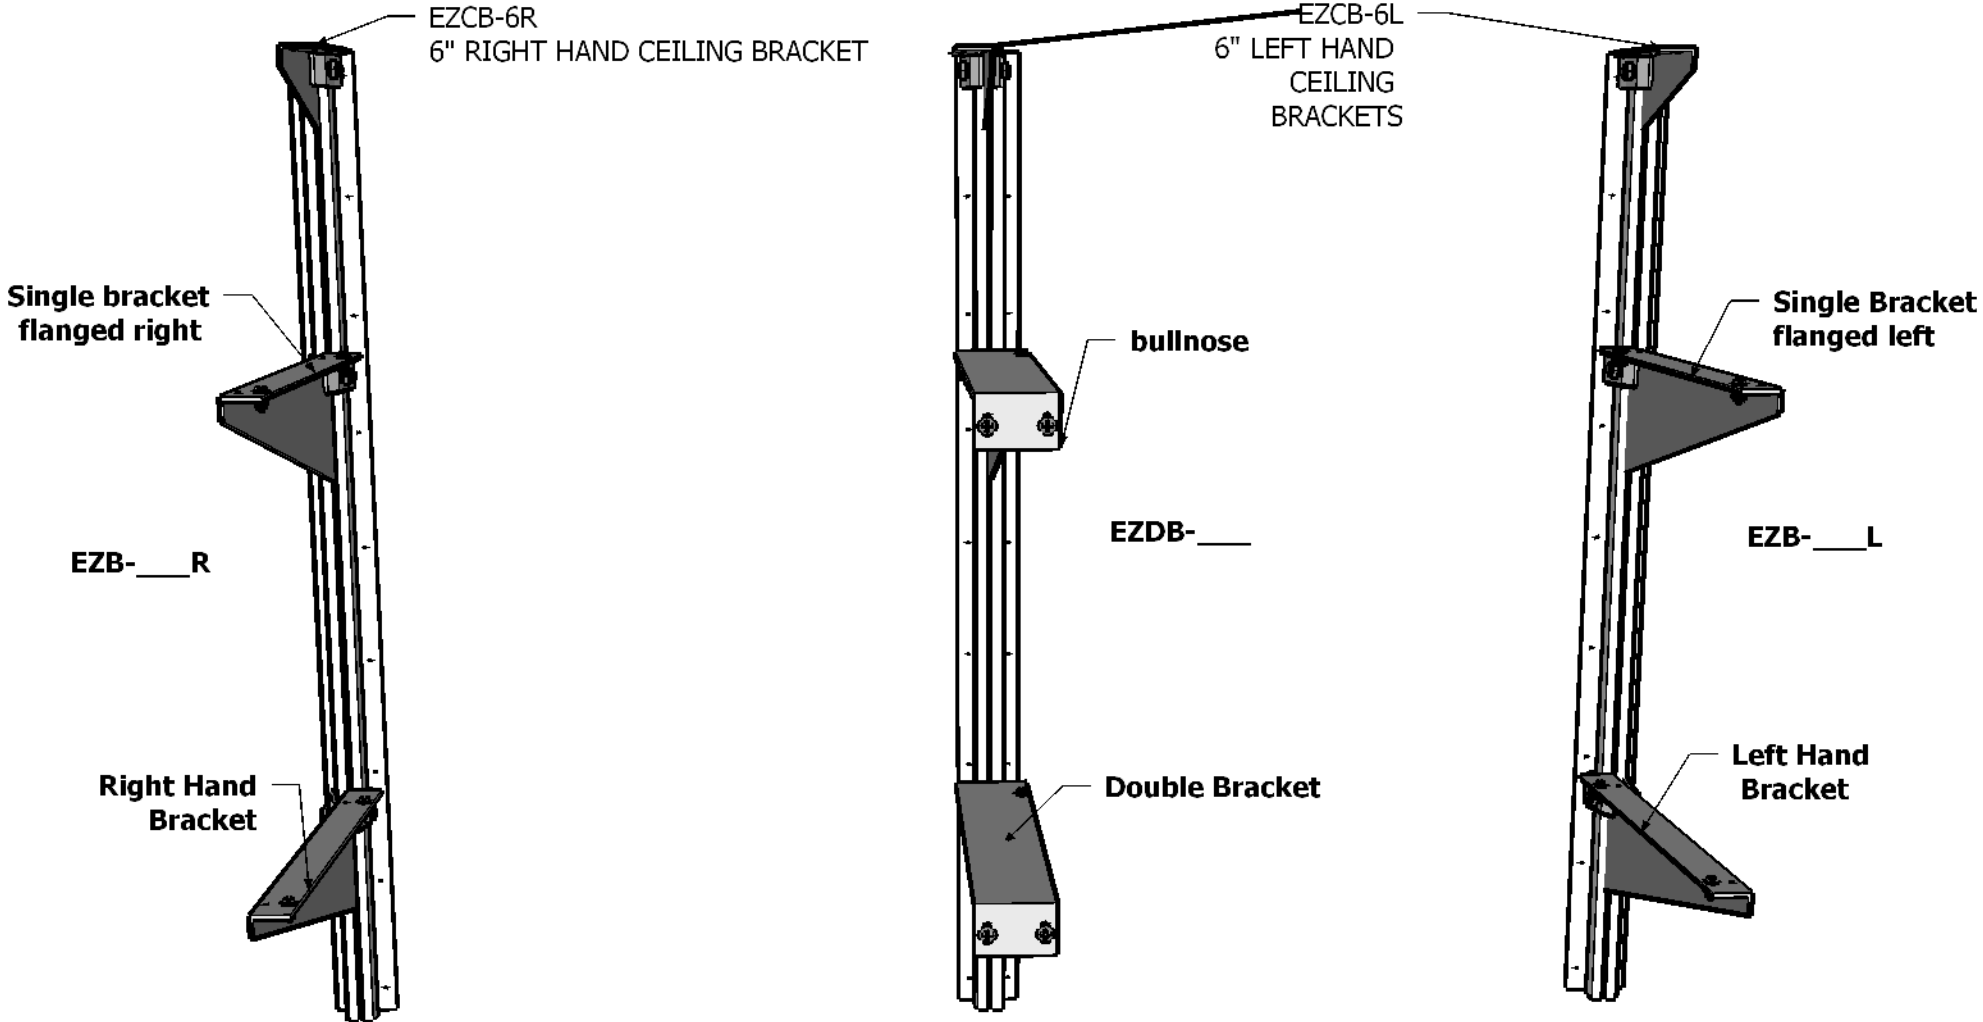

Usually, only the outside uprights will utilize single brackets. Note the single brackets have a top flange that "points in" to the shelving run. All interior uprights will typically use double brackets. The double bracket has a wider top flange in addition to the bullnose.

The brackets attach to the upright utilizing two clamp halves and the 3/8" bolt and thumb nut (included). The rear of the bracket is inserted into the vertical groove of the upright with the clamp halves positioned on each side.