


## CROSS BRACE INSTALLATION INSTRUCTIONS

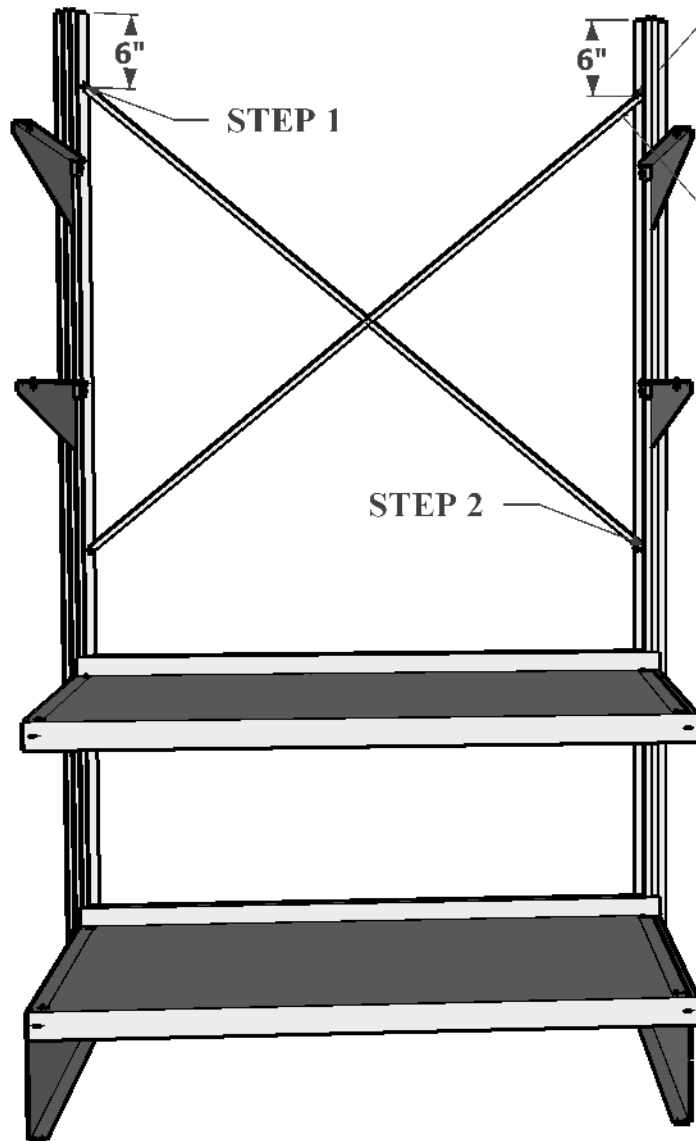

**FREESTANDING & BACK TO BACK UPRIGHTS WILL HAVE 1/4" HOLES PRE-PUNCHED 6" FROM THE TOP OF EACH END**

**STEP 3**

- 1. ATTACH CROSS BRACE TO TOP OF UPRIGHT WITH 1/4" DIAMETER X 3/4" L MACHINE SCREW WITH LOCKING HEX NUT.**
- 2. SWING CROSS BRACE OVER TO ADJACENT UPRIGHT & FIELD DRILL 1/4" HOLE (3/4" FROM CENTER LINE OF UPRIGHT)**
- 3. ATTACH 2ND CROSS BRACE IN SAME MANNER AS STEPS 1 & 2.**



**E-Z SHELVING SYSTEMS, INC.**  
Manufacturer of Cantilever Shelving  
[www.e-zshelving.com](http://www.e-zshelving.com)