


# BLOCKING SUGGESTIONS

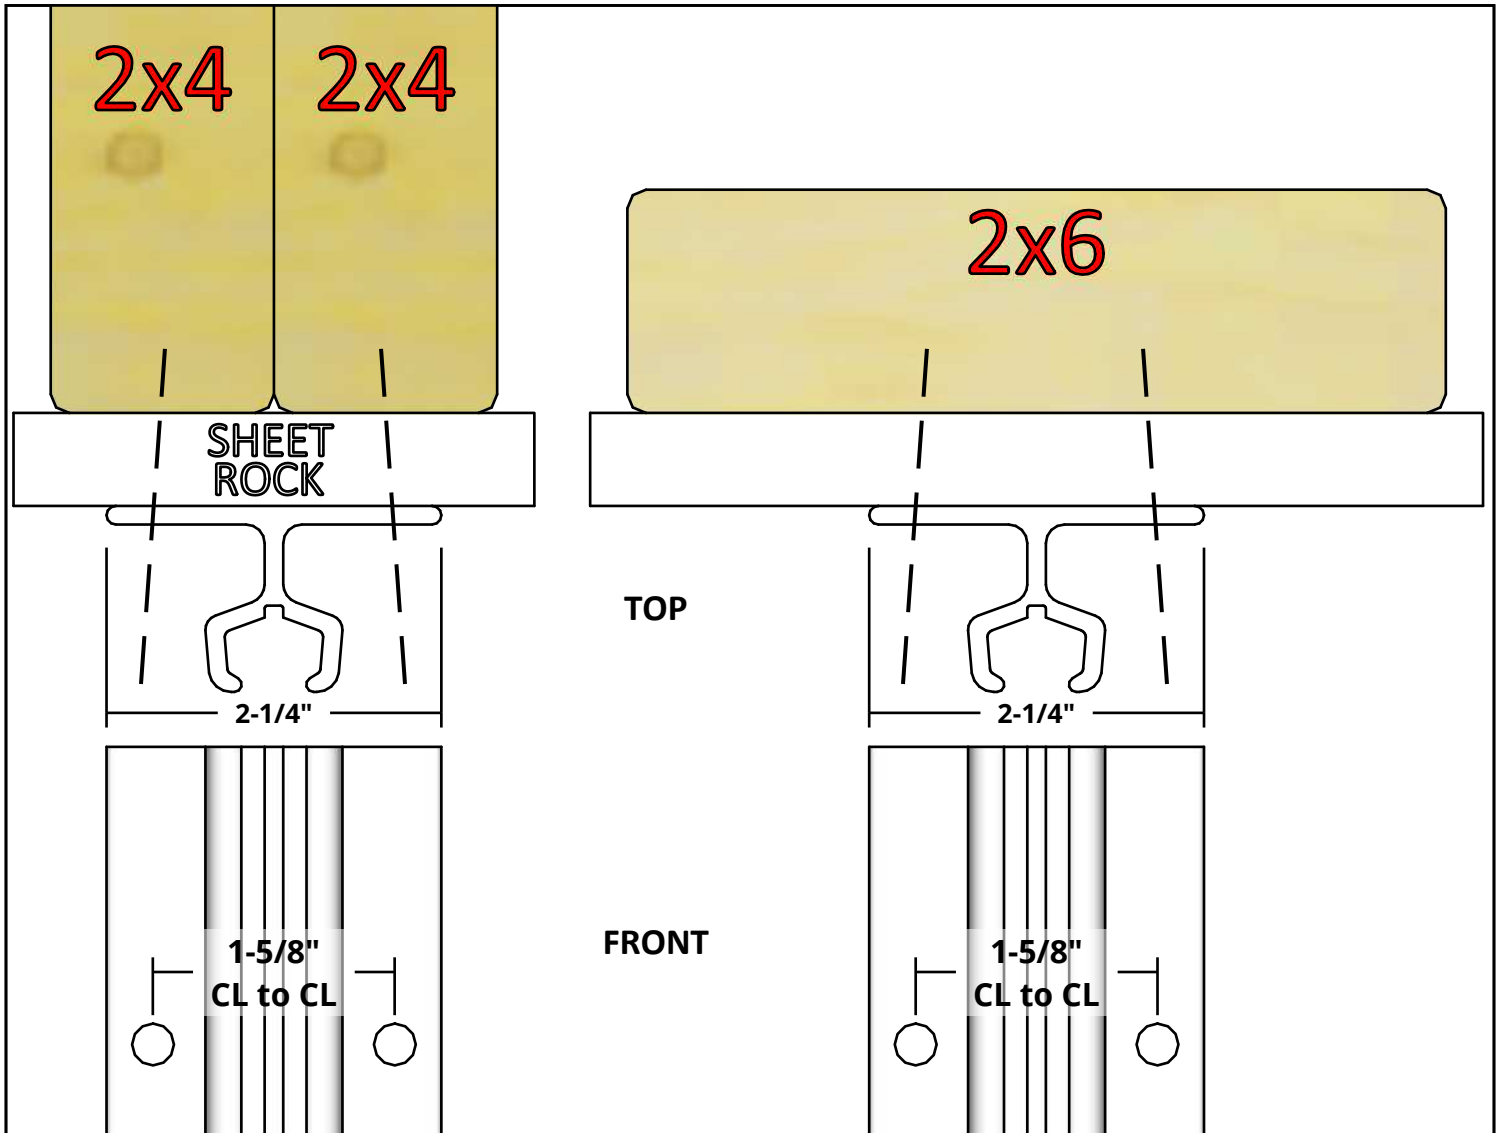

Use one of the following blocking methods before the walls are closed.

1. Double the studs at upright locations. Call E-Z for help with dimensions.
2. Mount a single 2 x 6 between the top and sole plate, flush with the sheetrock.
3. Mount 3/4" plywood to the studs before the sheetrock is attached. Please call E-Z with adjusted wall-to-wall dimensions of corner runs if this method is utilized.

Questions? Contact your E-Z Shelving specialist at (913) 384-1331.



**SHELVING SYSTEMS, INC.**  
Manufacturers of Cantilever Shelving

5538 Merriam Drive • Merriam, KS 66203  
(800) 353-1331 • e-zshelving.com

JOB NAME:

**BLOCKING  
SUGGESTIONS**

ISSUE: **February 16, 2019**

DESCRIPTION: **Blocking Suggestions for  
E-Z's Wall-Mounted Uprights**

PAGE: **01** of 01